

## **OPTO 22**

# **ioControl 'IVAL Set Counter' command and SNAP-PAC-S1**

## **APPLIES TO**

SNAP-PAC-S1 firmware

## **SYMPTOMS**

The IVAL Set Counter simulation command does not work with a SNAP-PAC-S1 control engine. When used, a value of 0 is written to the digital counter or quadrature counter IVAL.

OptoKB Article:	KB50302
Last Review:	April 11, 2006
Revision:	2.0

## **RESOLUTION**

Opto 22 has corrected this issue.

## **VERSIONS**

- Problem is found in version: R7.0a
- Problem corrected in version: R7.1a

### **DISCLAIMER**

This Opto 22 Knowledge Base ("OptoKB") article is intended to provide general technical information on a particular subject or subjects and is not an exhaustive treatment of such subjects. Accordingly, the information in this OptoKB article is not intended to constitute application, design, software, or other professional engineering advice or services. Opto 22 may modify the OptoKB articles at any time. Before making any decision or taking any action which might affect your equipment, you should consult a qualified professional.

OPTO 22 DOES NOT WARRANT THE COMPLETENESS, TIMELINESS, OR ACCURACY OF THE DATA CONTAINED IN THIS OPTOKB ARTICLE AND MAY MAKE CHANGES THERETO AT ANY TIME AT ITS SOLE DISCRETION WITHOUT NOTICE. FURTHER, ALL INFORMATION CONVEYED HEREBY IS PROVIDED TO USERS "AS IS." IN NO EVENT SHALL OPTO 22 BE LIABLE FOR ANY DAMAGES OF ANY KIND INCLUDING DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LOSS PROFIT, OR DAMAGE, EVEN IF OPTO 22 HAS BEEN ADVISED ON THE POSSIBILITY OF SUCH DAMAGES.

OPTO 22 DISCLAIMS ALL WARRANTIES WHETHER EXPRESSED OR IMPLIED WITH RESPECT TO THE INFORMATION (INCLUDING HARDWARE, SOFTWARE, AND/OR FIRMWARE) PROVIDED HEREBY, INCLUDING THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, AND NON-INFRINGEMENT. Note that certain jurisdictions do not sanction the exclusion of implied warranties: thus, this disclaimer may not apply to you.

Copyright © 2006 Opto 22. All rights reserved.